

Clio II wiring diagrams

Key to circuits

Diagram 1 Information for wiring diagrams

Diagram 2 Starting, charging, engine cooling fan, diagnostic socket

Diagram 3 Safety restraint system, electric power steering, horn, cigar lighter,
Diesel fuel filter heater, heater blower

Diagram 4 Typical air conditioning

Diagram 5 Instrument cluster

Diagram 6 Anti-lock brakes, front foglight, clock and external temperature gauge
Side, tail, number plate and headlights

Diagram 7 Direction indicators, hazard warning, rear fog light, stop and
reversing lights, headlight levelling

Diagram 8 Interior light, luggage compartment light, heated rear window,
front and rear wash/wipe, headlight washers

Diagram 9 Electric mirrors, central locking, audio system, electric sunroof



















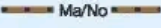

Diagram 10 Electric windows, Diesel engine management

Diagram 11 Fuel injection (D7F 720 models)

Diagram 12 Fuel injection (D7F 726 models)

Diagram 13 Fuel injection (E7J 780/K7M 744 models)

Key to symbols

Bulb		Item no.	2
Flashing bulb		Single speed pump/motor	
Switch		Twin speed pump/motor	
Multiple contact switch (ganged)		Gauge/meter	
Fuse/fusible link and current rating		Earth point	
Resistor		Diode	
Variable resistor		Light emitting diode (LED)	
Variable resistor		Solenoid actuator	
Wire splice or soldered joint		Heating element	
Connecting wires			
Wire colour (brown with black tracer)			
Screened cable			
Dashed outline denotes part of a larger item, containing in this case an electronic or solid state device.			
p3 - connector pin identification			
No - connector housing colour (black)			

Passenger fusebox

Fuse	Rating	Circuit protected
F1	15A	Airbag, multi-timer unit
F2	15A	Stop lights, instrument panel, automatic transmission economy/performance switch and light, multi-timer unit, diagnostic socket
F3	15A	Heated rear screen, air conditioning ECU, automatic transmission ECU, rear screen wiper, reversing lights
F4	20A	Windscreen wiper
F5	10A	Anti-lock braking system
F6	10A	Multi-timer unit, air conditioning fan and control unit
F7	15A	Radio, cigar lighter, clock, heated rear screen
F8	15A	Horn
F9	10A	LH dipped beam
F10	10A	RH dipped beam
F11	10A	RH main beam
F12	10A	LH main beam
F13	20A	Dipped headlights (twin headlights)
F14	5A	Daytime running lights
F15	-	Spare
F16	-	Spare
F17	10A	Heated mirrors
F18	20A	Front fog lights
F19	-	Spare
F20	-	Spare
F21	5A	Multi-timer unit, diagnostic socket
F22	15A	Direction indicators and hazard warning lights
F23	15A	Rear fog lights
F24	-	Spare
F25	-	Spare
F26	10A	LH sidelights, switch lighting
F27	10A	RH sidelights, switch lighting
F28	2A	Immobiliser transponder, decoder unit
F29	20A	Accessories cut-off, interior lights, electric mirrors, radio, clock
F30	30A	Heated rear screen
F31	20A	Central locking
F32	30A	Electric windows
F33	20A	Headlight washer
F34	30A	Heater blower
F35	20A	Heated seats
F36	30A	Electric windows
F37	20A	Sunroof
F38	-	Spare
F39	-	Spare

Key to circuits

Diagram 1	Information for wiring diagrams.
Diagram 2	Starting, charging, engine cooling fan, diagnostic socket.
Diagram 3	Safety restraint system, electric power steering, horn, cigar lighter, Diesel fuel filter heater, heater blower.
Diagram 4	Typical air conditioning.
Diagram 5	Instrument cluster.
Diagram 6	Anti-lock brakes, front foglight, clock and external temperature gauge. Side, tail, number plate and headlights.
Diagram 7	Direction indicators, hazard warning, rear fog light, stop and reversing lights, headlight levelling.
Diagram 8	Interior light, luggage compartment light, heated rear window, front and rear wash/wipe, headlight washers.
Diagram 9	Electric mirrors, central locking, audio system, electric sunroof.
Diagram 10	Electric windows, Diesel engine management.
Diagram 11	Fuel injection (D7F 720 models).
Diagram 12	Fuel injection (D7F 726 models).
Diagram 13	Fuel injection (E7J 780/K7M 744 models).

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items


- 1 Battery
- 2 Ignition switch
- 3 Starter motor
- 4 Alternator
- 5 Engine fusebox
- 6 Passenger fuse/relay/multi-timer unit
- 7 Automatic transmission unit
- a = starter inhibitor switch

- 8 Cooling fan switch
- 9 Cooling fan motor
- 10 Cooling fan resistor
- 11 Diagnostic socket
- 12 Engine relay unit
- a = starter inhibitor relay
- b = injection locking relay
- c = cooling fan relay
- d = percolation fan low speed relay


Diagram 2

H32309


Starting and charging system (manual transmission)

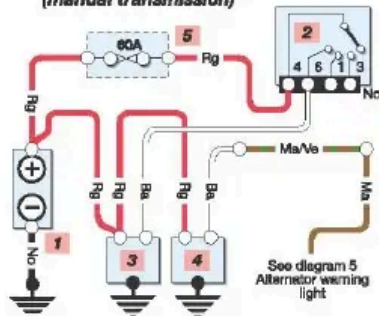


Engine cooling fan - petrol model (typical model without A/C)

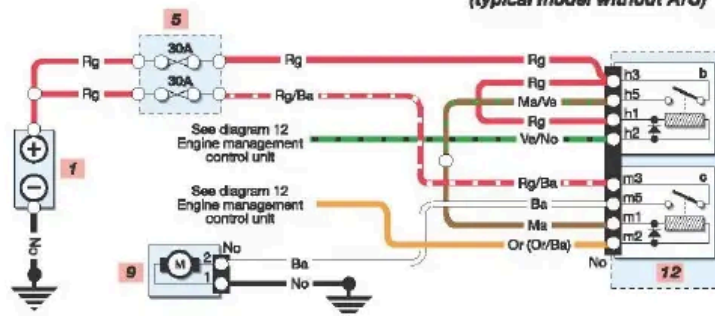


Starting and charging system (automatic transmission)

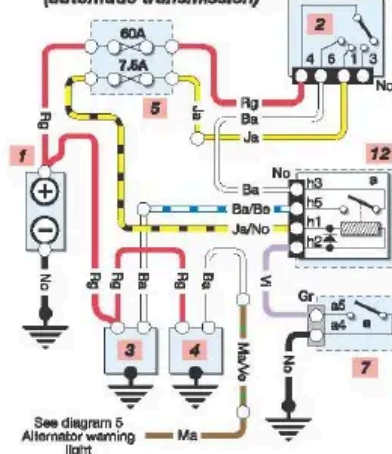


Engine cooling fan - petrol model (typical model with A/C)

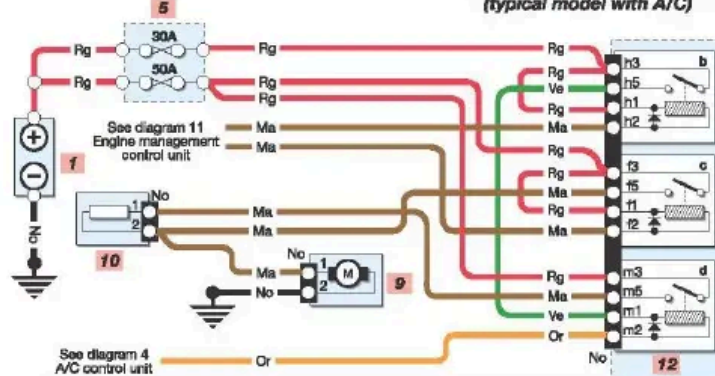

Engine cooling fan (Diesel engine)

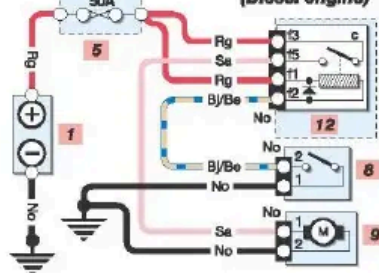

Diagnostic socket

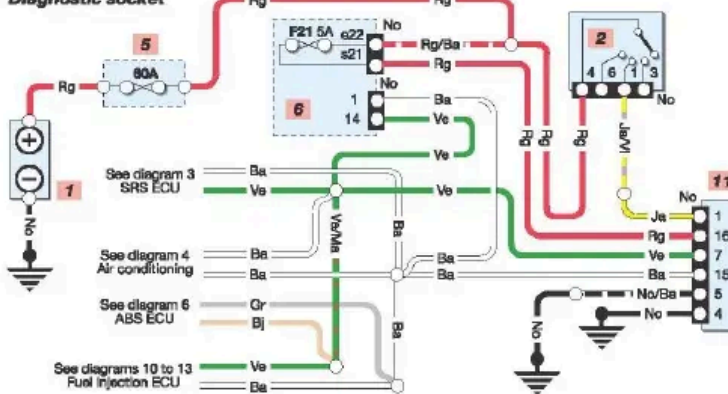

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		


Key to items

1	Battery	16	SRS control unit	23	Cigar lighter
2	Ignition switch	17	Driver's seatbelt pretensioner	24	Fuel filter heater element
5	Engine fusebox	18	Passenger's seatbelt pretensioner	25	Heater blower assembly
6	Passenger fuse/relay/multi-timer unit	19	Driver's airbag	26	Heater blower switch
12	Engine relay unit	20	Passenger's airbag	a	= blower switch
e	= power steering relay	21	Horn/light switch	27	Interior lighting rheostat
f	= fuel filter heater relay	a	= horn		
15	Power steering electric pump	b	= slide/headlight		
		22	Horn		


Diagram 3

H32910


Safety restraint system

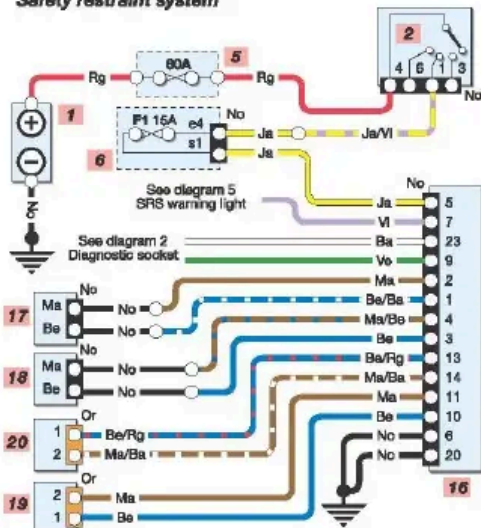


Cigar lighter

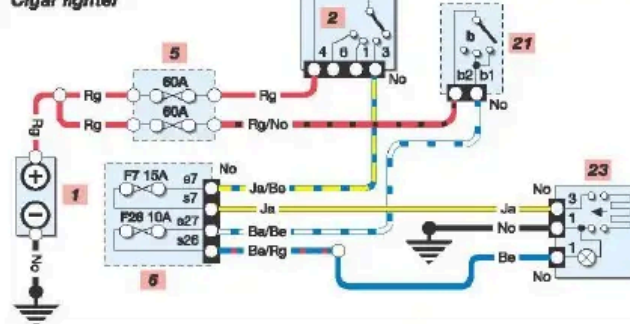


Diesel fuel filter heater

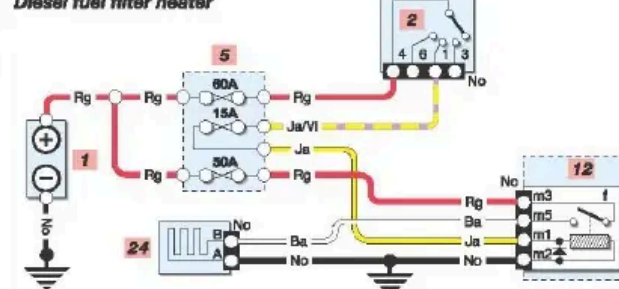


Electric power steering

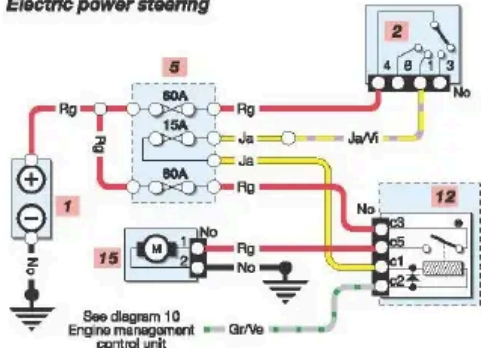

Heater blower (models without A/C)

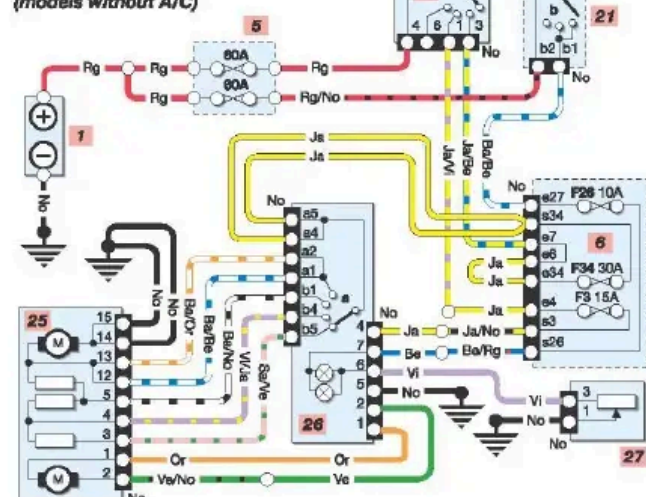

Horn

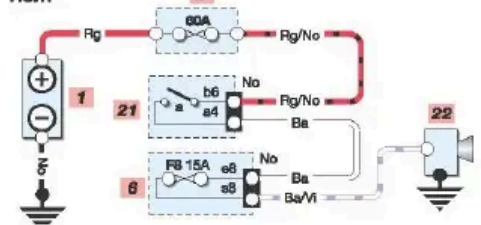

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
21	Horn/light switch
25	Heater blower assembly


26	Heater blower switch
a	= blower switch
b	= a/c switch
c	= recirculation switch
d	= heated rear window switch
e	= heated rear window indicator
f	= recirculation indicator
g	= a/c indicator

27	Interior lighting rheostat
30	Air conditioning monitoring unit
31	Air conditioning three function pressure switch
32	Air conditioning clutch

Diagram 4

H32911

Typical air conditioning

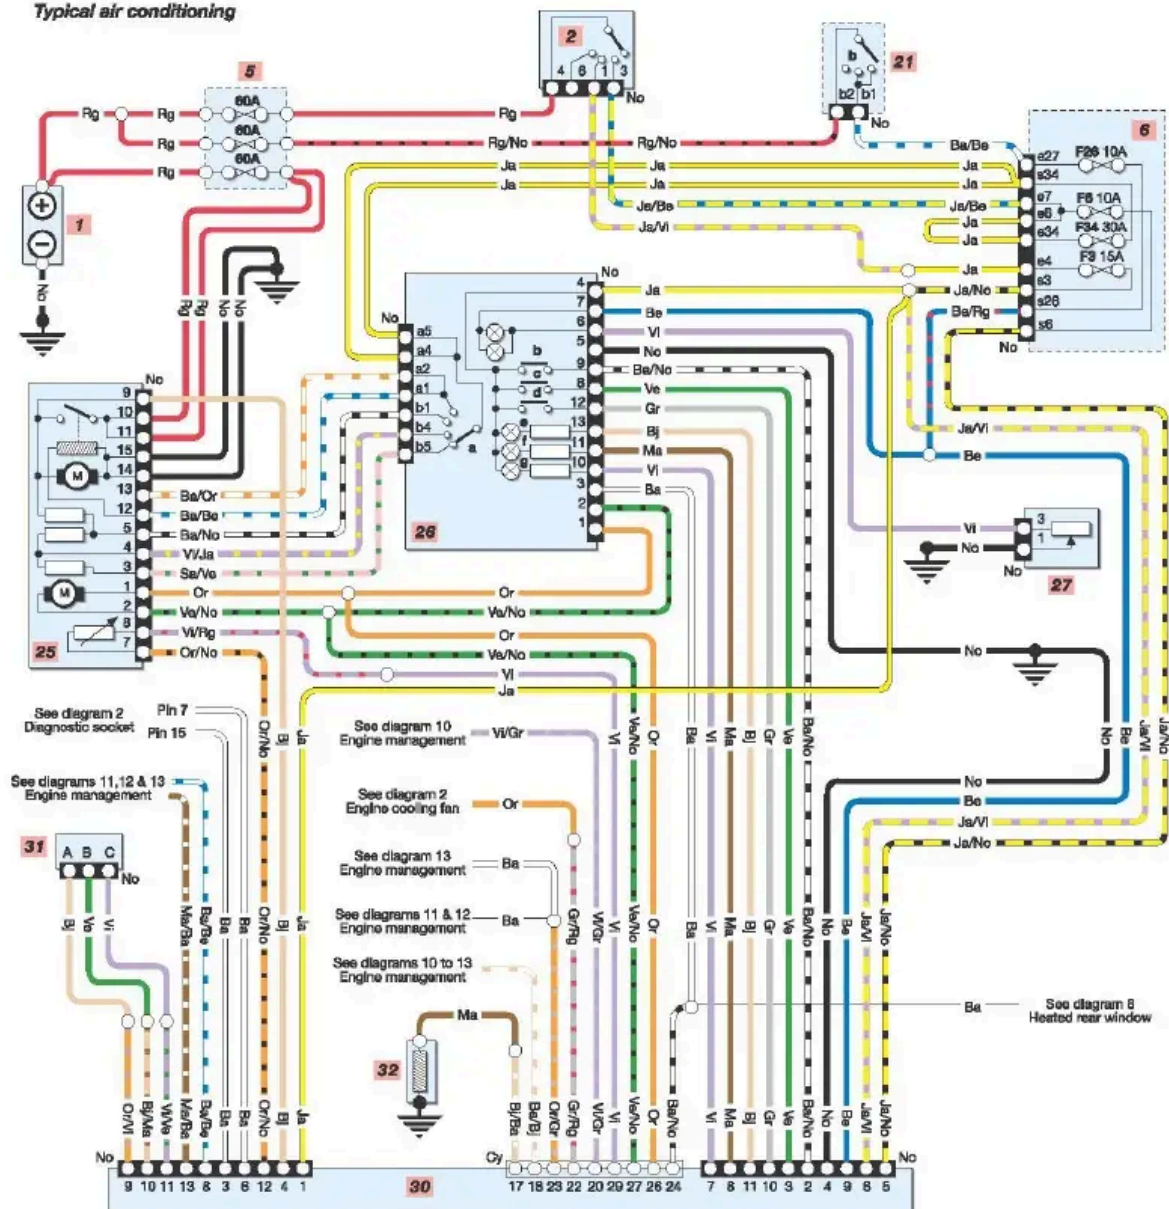

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

- 1 Battery
- 2 Ignition switch
- 5 Engine fusebox
- 6 Passenger fuse/relay/multi-timer unit
- 21 Horn/light switch
- b = side/headlight
- 27 Interior lighting rheostat
- 35 Instrument cluster
- a = fuel gauge
- b = immobiliser warning light
- c = injection warning light
- d = alternator warning light
- e = low fuel warning light
- f = high temp. warning light
- g = oil pressure warning light

- 35 Instrument cluster continued
- h = rear foglight warning light
- i = front foglight warning light
- j = RH indicator warning light
- k = LH indicator warning light
- l = dipped beam warning light
- m = main beam warning light
- n = seat belt warning light
- o = glow plug warning light
- p = SRS warning light
- r = door ajar warning light
- s = instrument illumination
- t = temp. gauge
- u = pad wear warning light
- v = ABS warning light
- w = brake system warning light


- 35 Instrument cluster continued
- x = tachometer
- y = speedometer
- z = oil level gauge
- a1 = trip computer
- 36 Fuel gauge sender unit/fuel pump
- 37 Oil pressure switch
- 38 Seat belt switch
- 39 Coolant temp. sensor/temp. switch
- 40 Pad wear sensor
- 41 Brake fluid level switch
- 42 Handbrake switch
- 43 Oil level sensor
- 44 Windscreen wash/wipe switch
- a = trip computer reset button

① Diesel models

Diagram 5

H32312

Instrument cluster

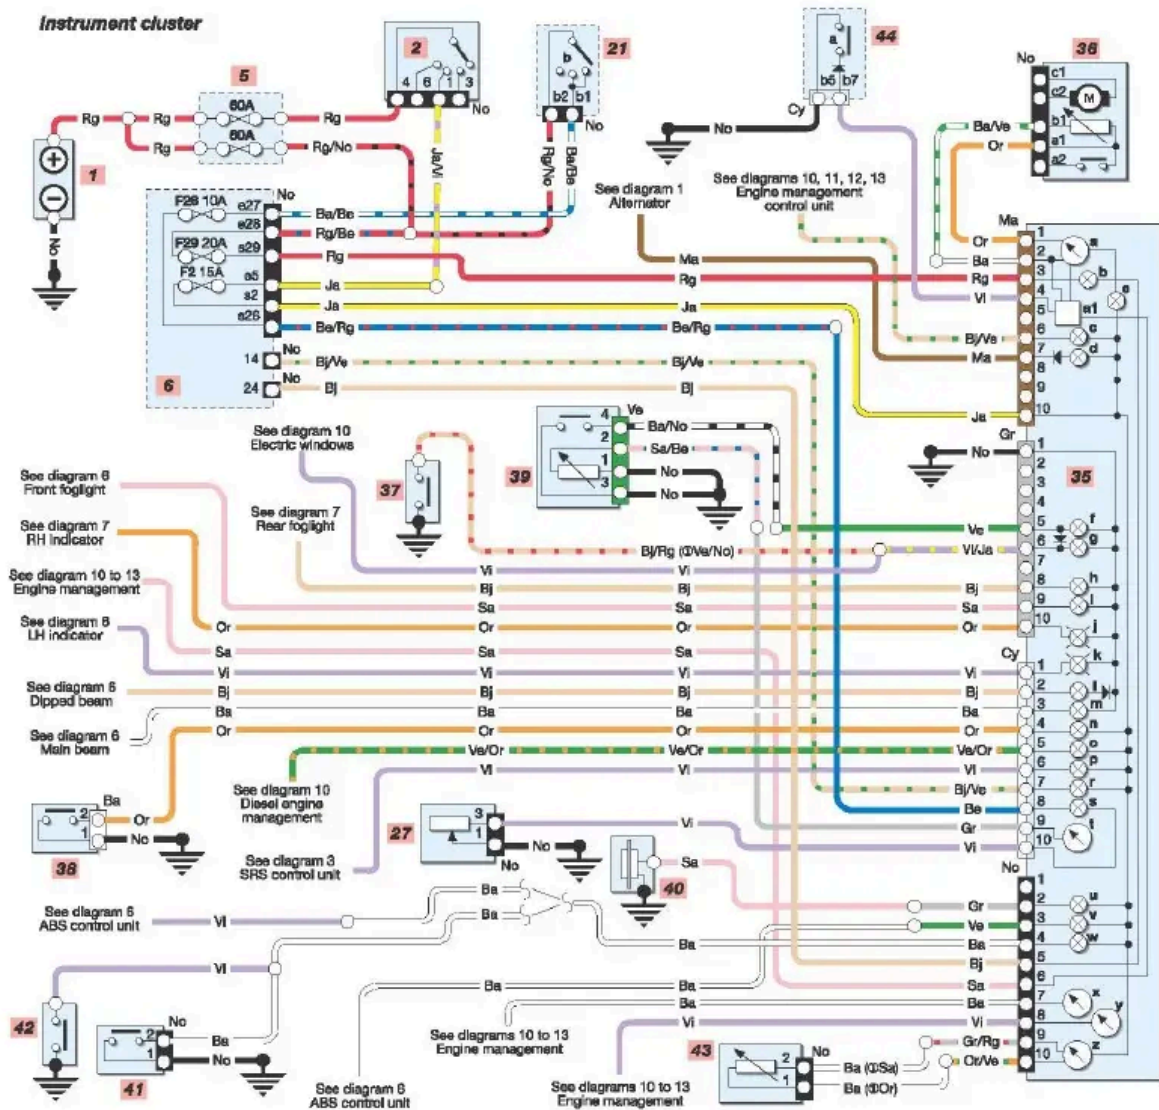

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay unit
a	= front foglight relay
21	Horn/light switch
b	= side/headlight
c	= front foglight
d	= headlight flasher
27	Interior lighting rheostat
46	ABS control unit


47	LH front wheel sensor
48	RH front wheel sensor
49	LH rear wheel sensor
50	RH rear wheel sensor
51	Clock/external temp. display (depending upon equipment)
52	Clock/external temp./radio display (depending upon equipment)
53	Passenger mirror assembly (outside air temp. sensor)
54	LH sidelight

55	RH sidelight
56	LH headlight
57	RH headlight
58	LH rear light unit
a	= tail light
59	RH rear light unit
a	= tail light
60	Number plate light
61	LH front foglight
62	RH front foglight


Diagram 6

H32313


Anti-lock brakes

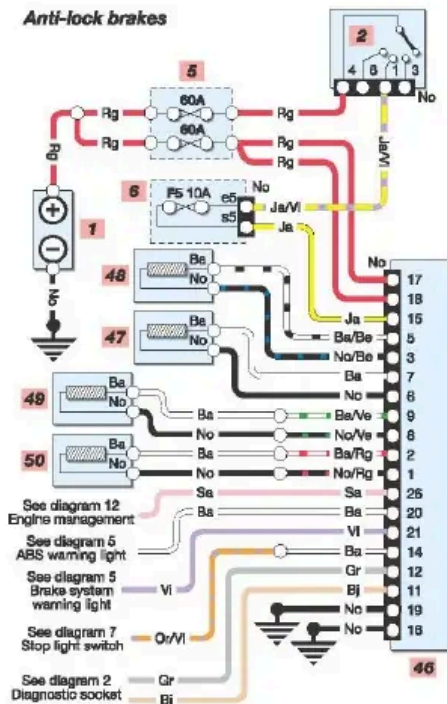


Front foglight

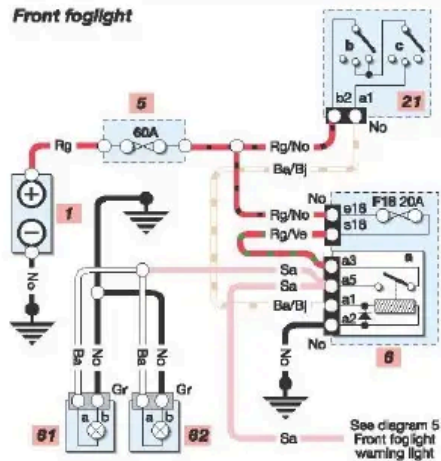

Clock and external temperature gauge

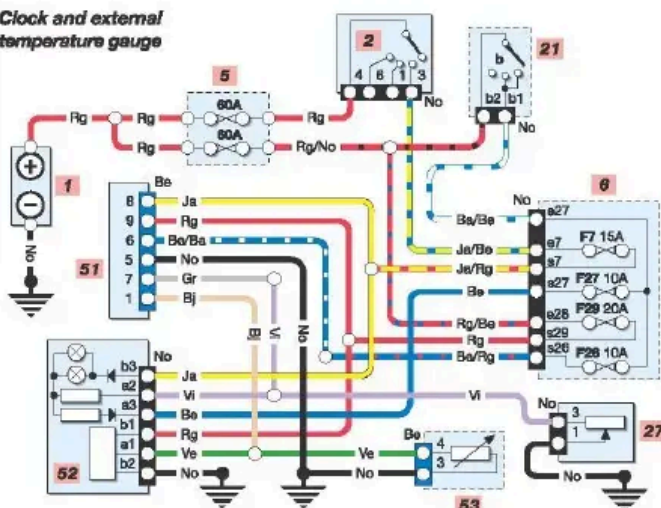

Side, tail, number plate and headlights

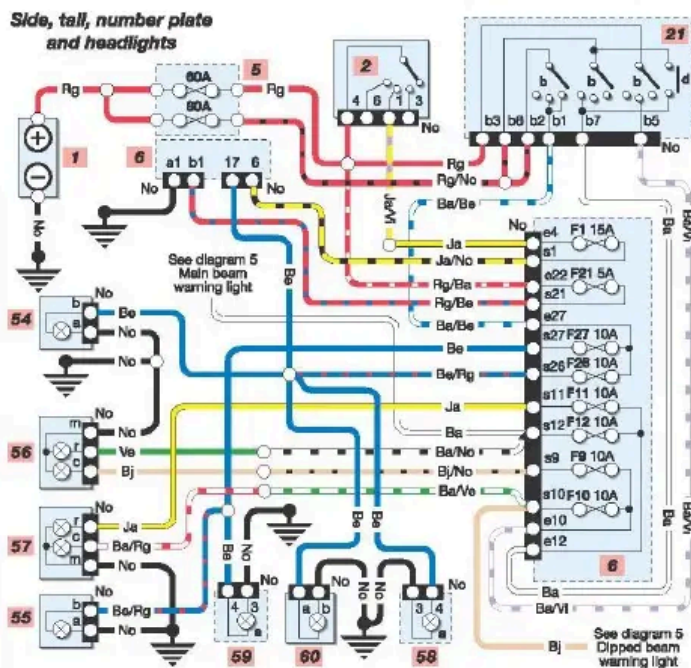

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
21	Horn/light switch
	b = side/headlight
	d = rear foglight
	e = direction indicator
56	LH headlight
57	RH headlight


58	LH rear light unit
	b = reversing light
	c = stop light
	d = direction indicator
	e = foglight
59	RH rear light unit
	b = reversing light
	c = stop light
	d = direction indicator
65	High level stop light
66	Reversing light switch (manual transmission)

67	Automatic transmission module
68	Automatic transmission control unit
69	Stop light switch
70	LH front indicator
71	RH front indicator
72	LH front indicator side repeater
73	RH front indicator side repeater
74	Hazard warning light switch
75	Headlight levelling control
76	LH headlight levelling motor
77	RH headlight levelling motor


Diagram 7

H32314


Direction indicators and hazard warning light

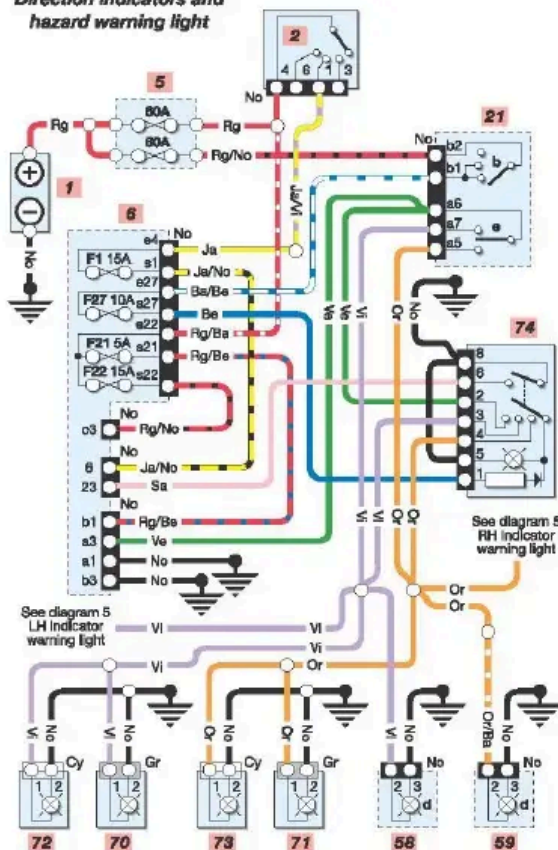


Rear foglight

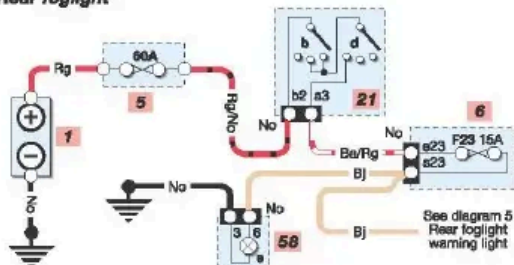

Stop and reversing lights

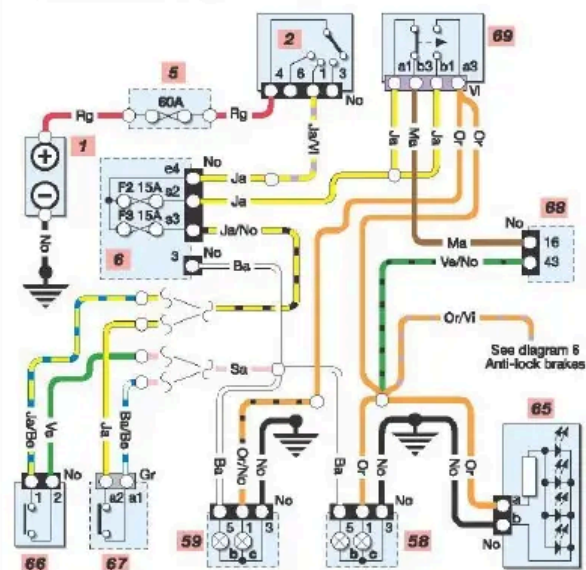

Headlight levelling

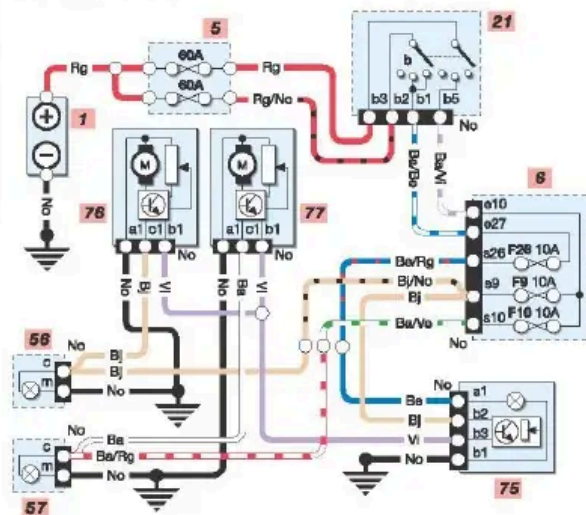

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
	b = heated rear window relay
44	Windscreen wash/wipe switch
	b = front wiper
	c = rear wash/wipe
	d = front washer


80	Infra-red receiver (if fitted)
81	Luggage compartment light switch
82	Luggage compartment light switch
83	Front courtesy light
84	Driver's door switch
85	Passenger's door switch
86	LH rear door switch
87	RH rear door switch
88	Front wiper motor

89	Rear wiper motor
90	Washer pump
91	Headlight washer pump
92	Headlight washer pump relay
93	Heated rear window


Diagram 8

H32915


Interior light and luggage compartment light

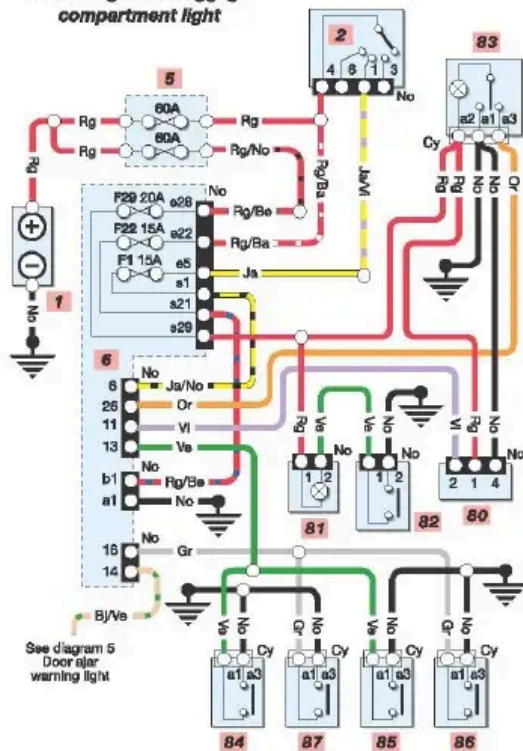


Front and rear wash/wipe

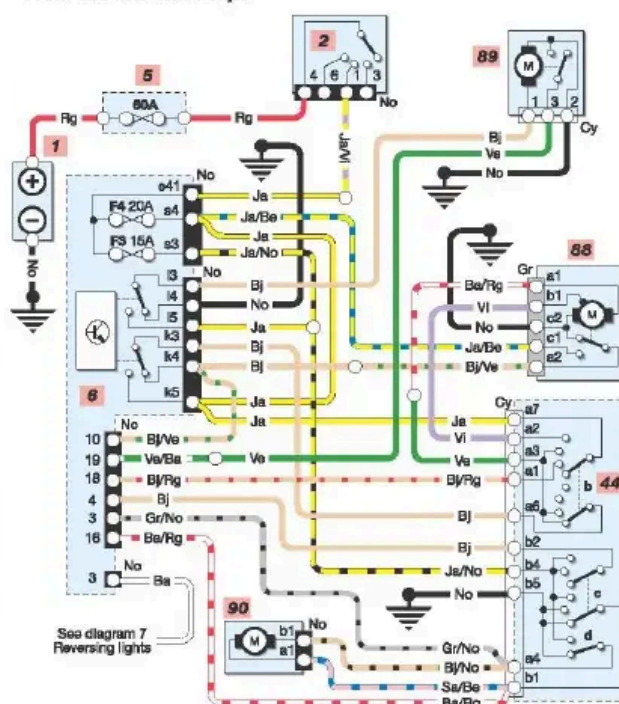

Heated rear window

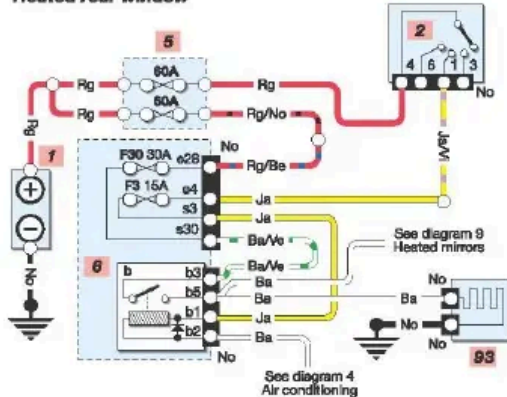

Headlight washers

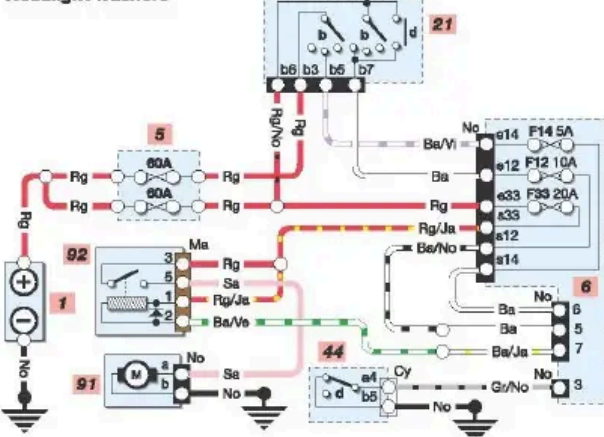

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Grey	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		


Key to items

1	Battery	95	Mirror switch	104	LH rear door lock motor
2	Ignition switch	96	Driver mirror assembly	105	RH rear door lock motor
5	Engine fusebox	97	Audio unit	106	Driver's door lock motor
6	Passenger fuse/relay/ multi-timer unit	98	LH front speaker	107	Passenger's door lock motor
21	Horn/light switch	99	RH front speaker	108	Sunroof motor
	b = side/headlight	100	LH front tweeter		
53	Passenger mirror assembly	101	RH front tweeter		
80	Infra-red receiver	102	Door lock switch		
		103	Tailgate lock motor		


Diagram 9

H32316


Electric mirrors

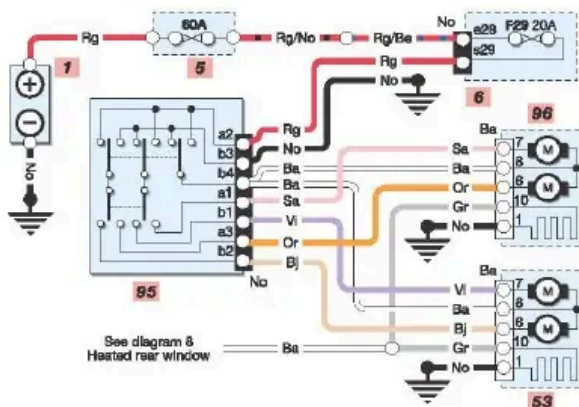


Audio system

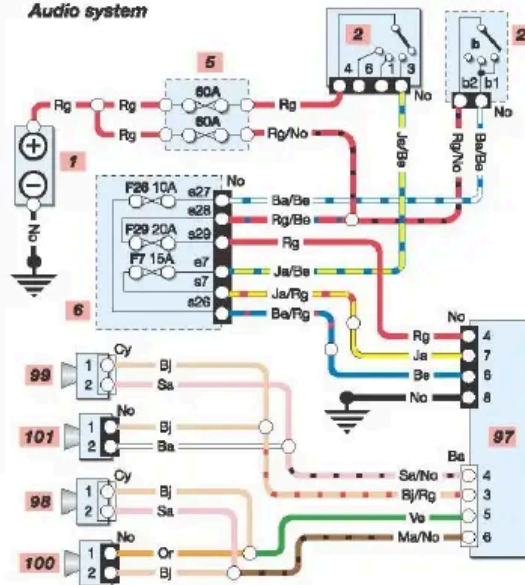

Central locking

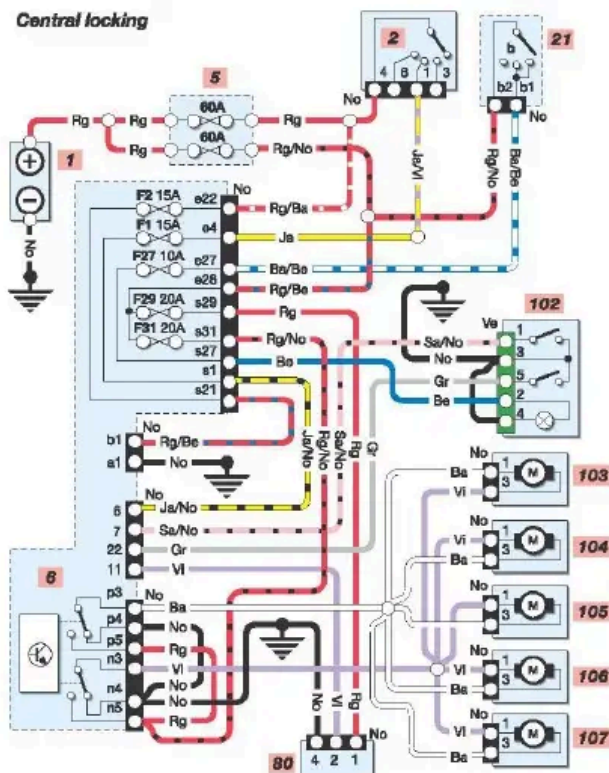

Electric sunroof

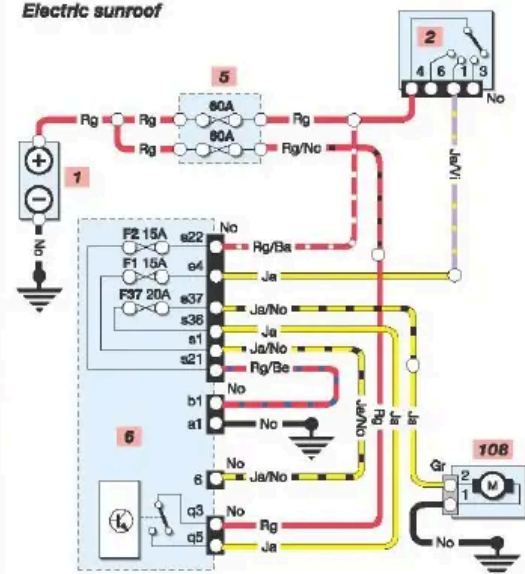

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
12	Engine compartment relay unit b = injection locking relay g = altitude relay
21	Horn/light switch
84	Driver's door switch


85	Passenger's door switch
110	Driver's window motor
111	Passenger's window motor
112	Driver's window switch
113	Driver's switch for passenger window
114	Passenger's window switch
115	Engine management control unit
116	Pre-heater unit
117	Glow plugs
118	Speed sensor
119	Inertia switch

120	Pump unit a = boost compensator b = immobiliser c = throttle potentiometer d = advance solenoid
121	EGR solenoid valve
122	Fast idle solenoid valve
123	Needle lift sensor
124	Speed threshold sensor
125	Air temp. sensor
126	Coolant temp. sensor


Diagram 10

H32317

Electric windows

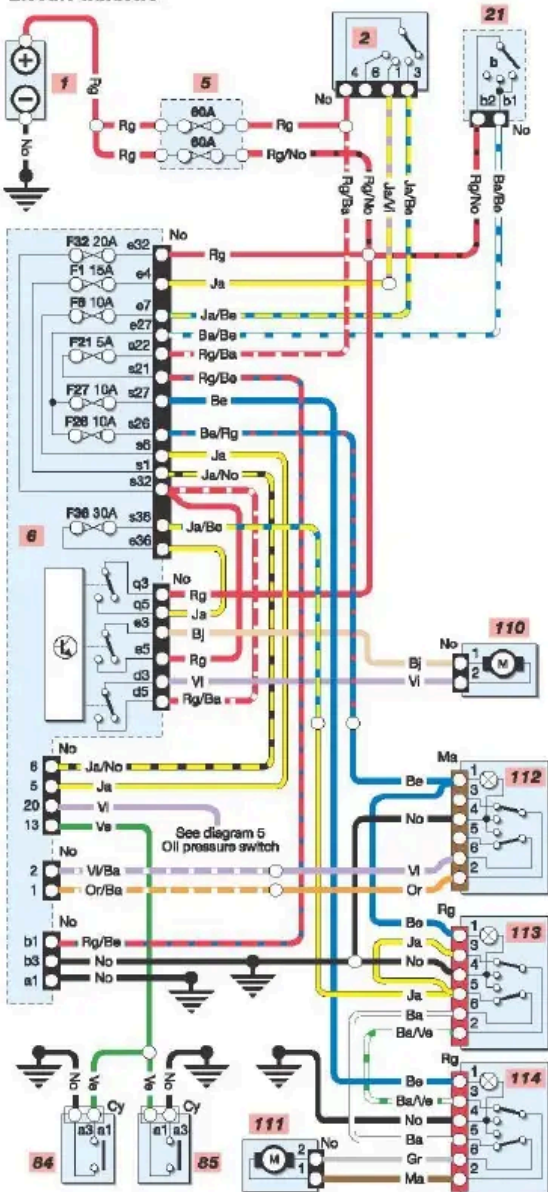

Engine management (typical Diesel model)

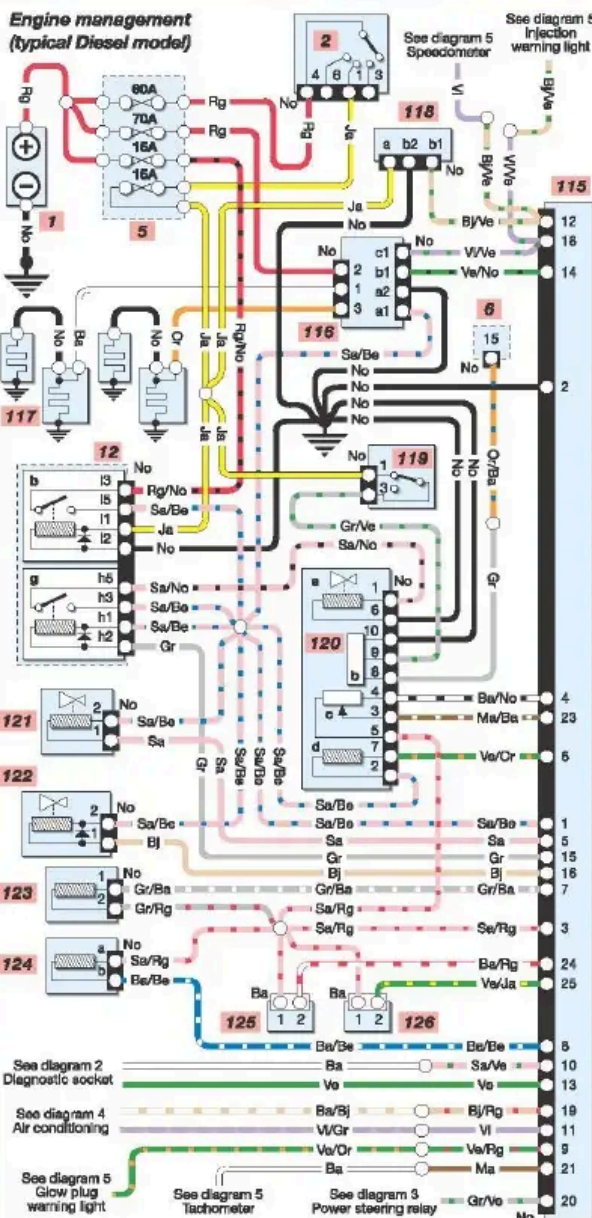

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

- 1 Battery
- 2 Ignition switch
- 5 Engine fusebox
- 6 Passenger fuse/relay/
multi-timer unit
- 12 Engine compartment relay unit
b = injection locking relay
h = fuel pump relay
- 36 Fuel gauge sender unit/fuel pump


- 115 Engine management control unit
- 118 Speed sensor
- 119 Inertia switch
- 124 Speed threshold sensor
- 125 Air temp. sensor
- 126 Coolant temp. sensor
- 130 Ignition coil module
- 131 Suppressor
- 132 Fuel injector

- 133 Throttle unit
- 134 Power steering pressure switch
- 135 Knock sensor
- 136 MAP sensor
- 137 Oxygen sensor
- 138 EVAP valve
- 139 Throttle potentiometer

Diagram 11

H32318

Fuel Injection (typical D7F T20 model)

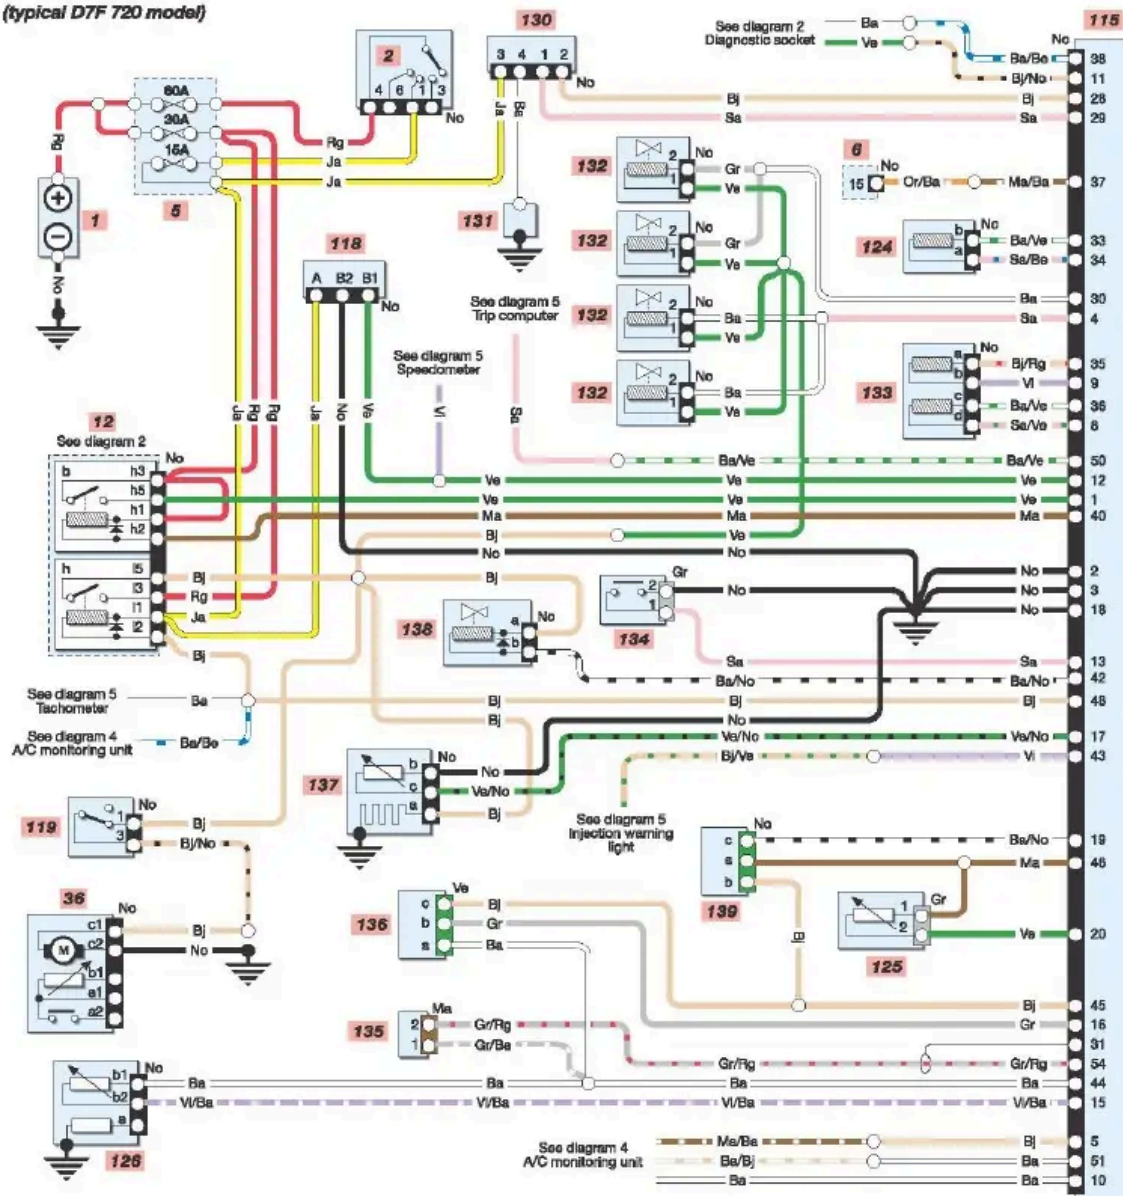

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
12	Engine compartment relay unit
b	= injection locking relay
h	= fuel pump relay
36	Fuel gauge sender unit/fuel pump


115	Engine management control unit
118	Speed sensor
119	Inertia switch
124	Speed threshold sensor
125	Air temp. sensor
126	Coolant temp. sensor
130	Ignition coil module
131	Suppressor
132	Fuel injector

133	Throttle unit
134	Power steering pressure switch
135	Knock sensor
136	MAP sensor
137	Oxygen sensor
138	EVAP valve
139	Throttle potentiometer

Diagram 12

H32319

Fuel injection (typical D7F 728 model)

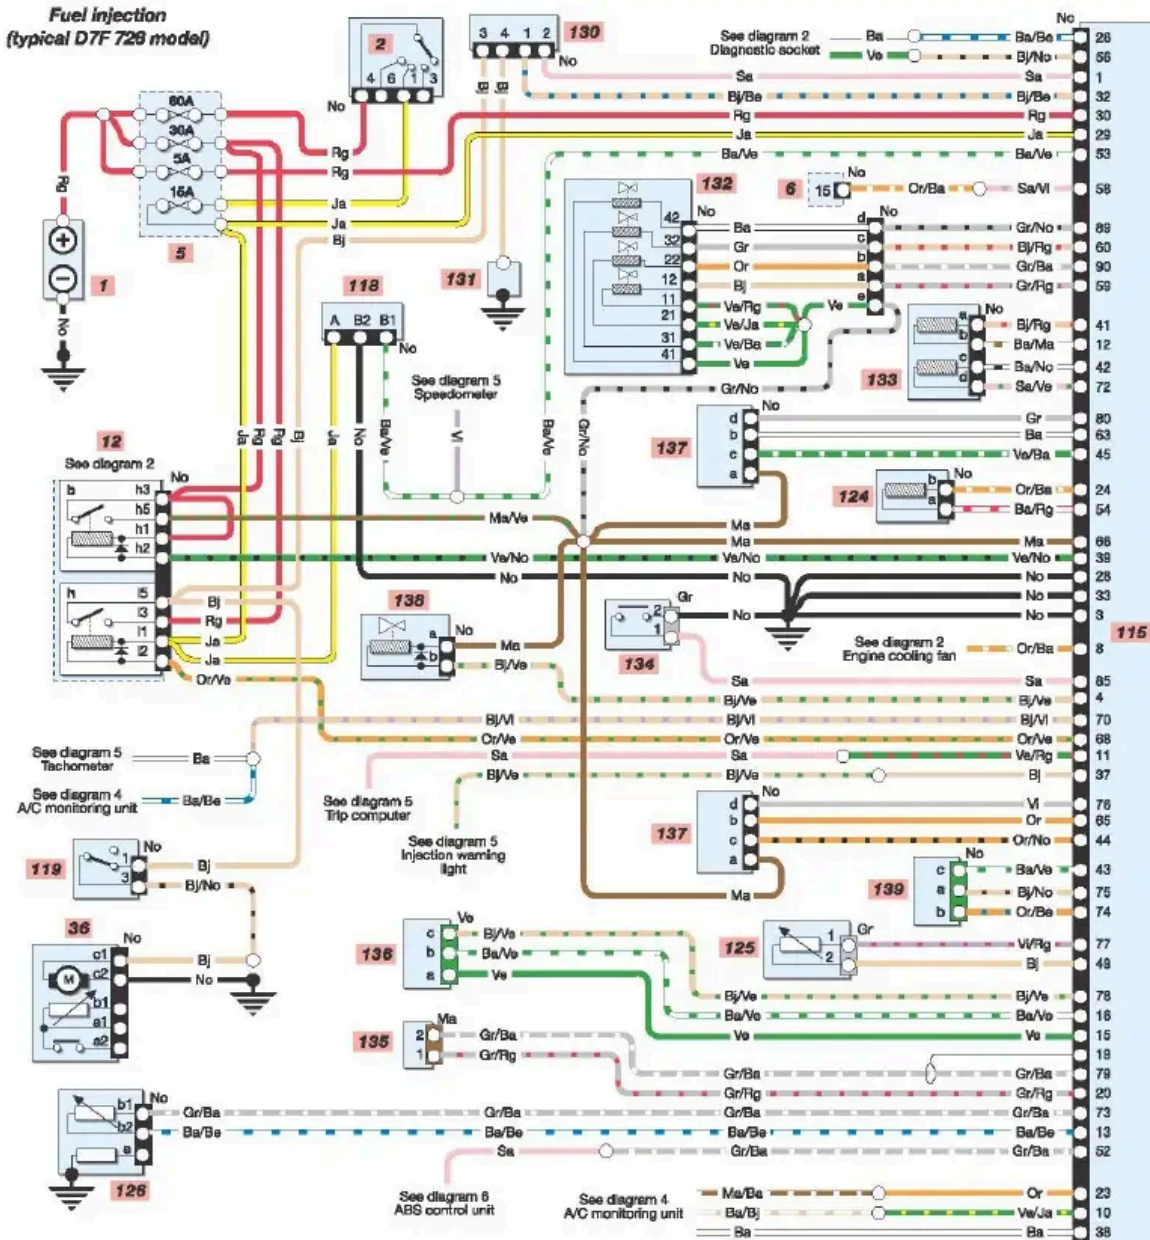

Wire colours

Ba	White	No	Black
Be	Blue	Or	Orange
Bj	Beige	Rg	Red
Cy	Clear	Sa	Pink
Gr	Gray	Ve	Green
Ja	Yellow	Vi	Mauve
Ma	Brown		

Key to items

1	Battery
2	Ignition switch
5	Engine fusebox
6	Passenger fuse/relay/ multi-timer unit
12	Engine compartment relay unit b = injection locking relay h = fuel pump relay
36	Fuel gauge sender unit/fuel pump

115	Engine management control unit
118	Speed sensor
119	Inertia switch
124	Speed threshold sensor
125	Air temp. sensor
126	Coolant temp. sensor
131	Suppressor
132	Fuel Injector
133	Throttle unit

134	Power steering pressure switch
135	Knock sensor
136	MAP sensor
137	Oxygen sensor
138	EVAP valve
139	Throttle potentiometer
140	Ignition coil

Diagram 13

H32320

Fuel Injection (typical) ETJ 780/K7M 744 models

